


## CTC 716 CAT

7/16" REVEAL

- Provides clean transition between hard surface floors and carpet.
- Can be used with stone, tile, or wood floors.
- Overhang prevents frayed carpet edges.

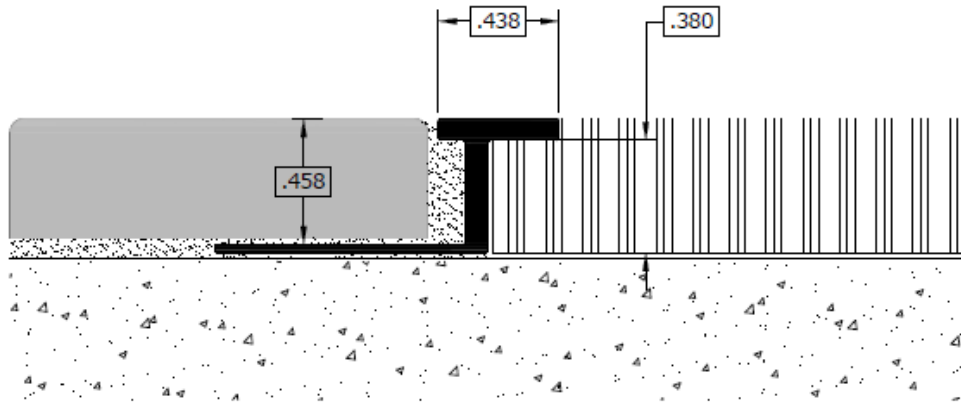

### Installation Instructions

- Adhere perforated leg to sub-floor with hard flooring adhesive.
- Cover entire leg with adhesive and set tile or wood flush or slightly above top of carpet trim.
- Leave up to a 1/16" joint along edge and grout as usual.
- Carpet should be tucked under the overhang when installed.

